



Lantech

Operating Guide of N-KEY

Latest update: Jan 2018

Version: 1.00

Important Notice

Lantech Communications Global, Inc. reserves the right to modify the equipment, its specification or this manual without prior notice, in the interest of improving performance, reliability, or servicing. At the time of publication all data is correct for the operation of the equipment at the voltage and/or temperature referred to. Performance data indicates typical values related to the particular product.

No part of this documentation or information supplied may be divulged to any third party without the express written consent of Lantech Communications Global Inc. Products offered may contain software which is proprietary to Lantech Communications Global Inc. The offer or supply of these products and services does not include or infer any transfer of ownership.

Applied Models

This operating guide applies to the following models: N-KEY

The model list may be changed, Lantech Communications Global, Inc. reserves the right to modify the equipment, its specification or this manual without prior notice.

1. Hardware installation

There are 3 ways to supply power to N-Key

1.1 PoE

PoE Ethernet Switch



PoE



1.2 Power adapter


AC Adapter




DC 5V



1.3 USB connection

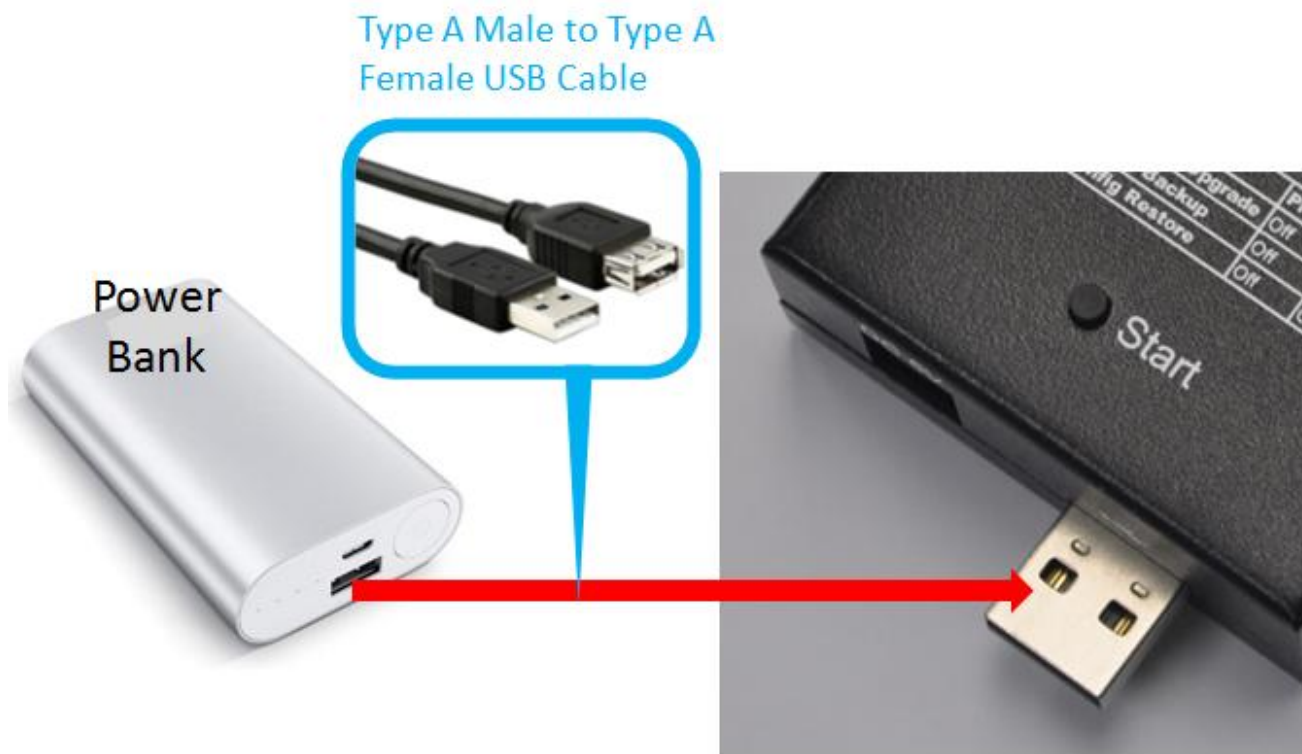

2. Definition of DIP switch of N-Key

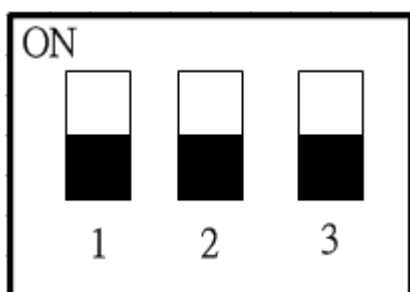


Set DIP1 as ON position , N-Key will change to USB dongle mode.

Set DIP2 as OFF position, N-Key will be able to upgrade firmware/configuration import/configuration export.

	PIN1	PIN2	PIN3
Firmware upgrade	OFF	ON	N/A
Config backup	OFF	OFF	OFF
Config restore	OFF	OFF	ON

3.LED Status

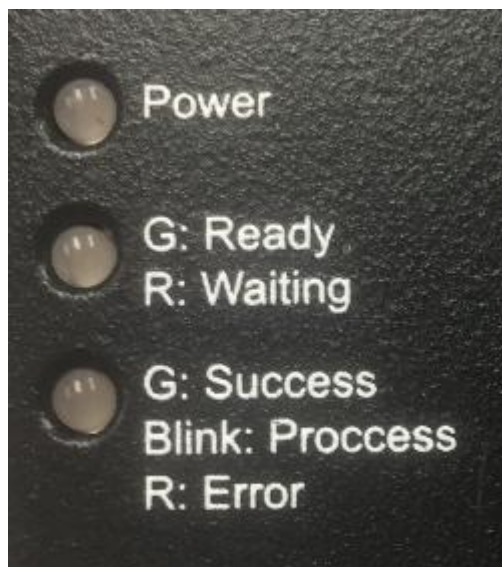

LED 1 : Power Indicator

On: power

Off: no power

LED 2 : Status 1

Red Blinking: waiting

Green : status ready

LED 3 : Status 2

Orange: In transferring process


Red: Warning

Green : Successfully

4.Operating procedure of N-Key

4.1.Set N-Key as USB Dongle

4.1.1 Set DIP switch as ON-OFF-OFF

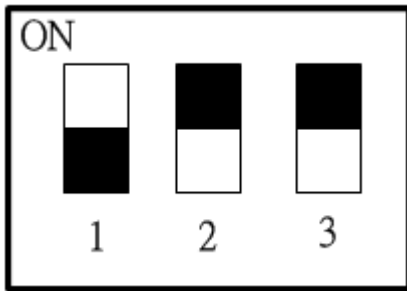

4.1.2 When N-Key set as USB dongle , you can

4.1.2.1 Copy firmware to N-Key

4.1.2.2 Edit configuration file which stored in N-Key

4.2. Use N-Key to upgrade firmware of switch

4.2.1 Set N-Key as USB Dongle

4.2.2 Connect N-Key with desktop directly or via extension cable

4.2.3 Copy new firmware into N-Key

4.2.4 Connect N-Key with switch via Ethernet connection, make sure the first LED is green and the other 2 LEDs are all green. (If the switch doesn't support PoE function, please make sure you have connected external power with N-Key.)

4.2.5 Press start button to begin upgrading.

4.2.6 The 3rd LED will begin to fresh , please wait about 3 mins.

4.2.7 If the 3rd LED change to green , it means the firmware has been upgraded to switch successfully, the switch will reboot automatically.

4.3. Use N-Key to backup configuration file of switch

4.3.1 Set DIP switch of N-Key as OFF-OFF-OFF




4.3.2 Connect N-Key with switch via Ethernet connection, make sure the first LED is green and second LED is green n 3rd LED is OFF. (If the switch doesn't support PoE function, please make sure you have connected external power with N-Key.)

4.3.3 Press start button to begin backup


4.3.4 When 3rd LED change to green , it means the backup job has done.

4.3.5 Change N-Key to USB Dongle mode and connect with desktop, you will find the backup configuration file as below picture, the “cfgexport” means exporting configuration file and 286046123456 is the MAC address of switch which can let you manage lots of backup files from different witches.

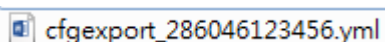


4.4. Use N-Key to Import configuration file of switch

4.4.1 Change N-Key to USB Dongle mode and connect with desktop, you will find the backup configuration file , you can edit it by office software , if you want import this file to switch , please save this edited file with new file name with cfgimport_MAC adres.yml format.

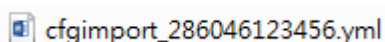

4.4.2 Set DIP switch of N-Key as OFF-OFF-ON

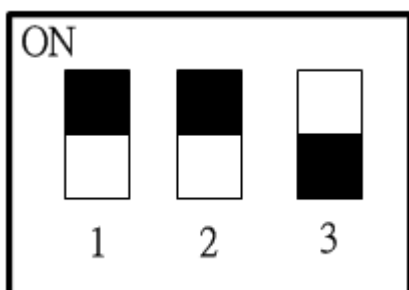

4.4.3 Connect N-Key with switch via Ethernet connection, make sure the first LED is green and second LED is green n 3rd LED is OFF. (If the switch doesn't support PoE function, please make sure you have connected external power with N-Key.)

4.4.4 Press start button to begin backup

4.4.5 When 3rd LED change to green , it means the backup job has done. The switch will reboot automatically.

Lantech

<http://www.lantechcom.tw>

Technical Assistance

Please contact us directly to reach our technical support team:

Telephone: +886-2-2799-5589

E-mail: support@lantechcom.tw